


SOFSCAPE PAVERS

INSTALLATION RECOMMENDATIONS

1. EXCAVATE TOPSOIL 7" BELOW THE FINISHED WALKWAY / PATIO LEVEL. THE EXCAVATED AREA SHOULD EXTEND 6" BEYOND THE AREA TO BE PAVED.
2. FILL IN 4" OF STONE. (1/4 THRU 3/4" STONE) or (QUARRY RUN STONE) (= APPROX. 35 LBS./SQ. FT.)
3. LEVEL & TAMP STONE UNTIL SURFACE IS COMPLETELY COMPACTED AND FLAT. (WET AREA FOR BETTER COMPACTION IF NECESSARY) (SEE FIG #1)

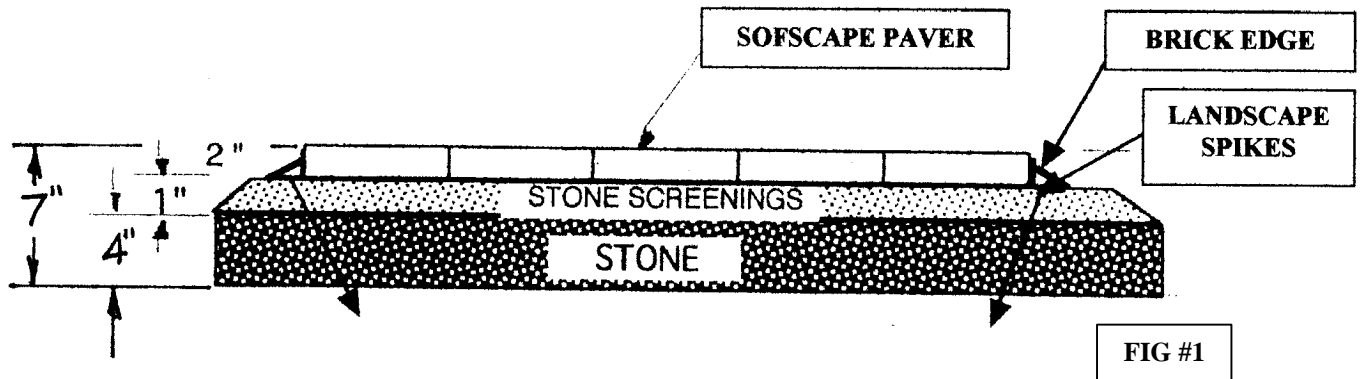

4. COVER STONE WITH 1" OF STONE SCREENINGS (=APPROX. 10 LBS./SQ.FT.) SCREED UNTIL LEVEL.
5. BEGIN LAYING PAVERS FROM THE CENTER OF ANY SIDE OF THE AREA YOU WANT TO COVER. LAY PAVERS LIGHTLY & TIGHTLY KEEPING ALL SIDES & CORNERS ALIGNED. (DO NOT PRESS OR HAMMER PAVERS INTO LOOSE SURFACE).
6. PAVERS CAN BE CUT IN HALF, EITHER (POINT TO POINT) OR (FLAT TO FLAT). THESE HALVES CAN BE USED TO MAKE STRAIGHT EDGES & 90° CORNERS. PAVERS CAN BE CUT WITH A BAND SAW OR A PNEUMATIC CUTTER (SEE FIG. #2)
7. WHEN YOU REACH A PERIMETER OF THE COVERED AREA. PLACE (BRICK EDGE) FIRMLY AGAINST THE PAVERS AND SPIKE IN PLACE.
8. WHEN THE PAVERS ARE LAYED & FIRMLY EDGED IN PLACE, USE A VIBRATORY PLATE COMPACTOR STARTING AT THE PERIMETER WORKING INWARD. REPEAT UNTIL TILE PAVERS ARE SEATED AND LEVEL TO YOUR SATISFACTION.

