



**mattaproducts**  
ALWAYS A SAFE STEP AHEAD



## INSTALLATION INSTRUCTIONS:

**1** Lay the first mat with the two straight edges forming the corner of the area you wish to cover. A gap of approximately 12mm ( $\frac{1}{2}$ " ) should be left between the mat and any wall or fixture, to allow for any expansion or contraction.

**2** Working away from the corner continue to lay the mats over the area, ensuring that they are fully locked together as you go.

**3** The mats can easily be fitted around fixtures and fittings. Mark the area to be cut on the mat with a felt tip or ballpoint pen then trim with a sharp knife or hacksaw, allowing 12mm gap around objects.

**4** Where the edge of the mats are exposed to any traffic, safety ramps should be fitted using the simple push to lock method.

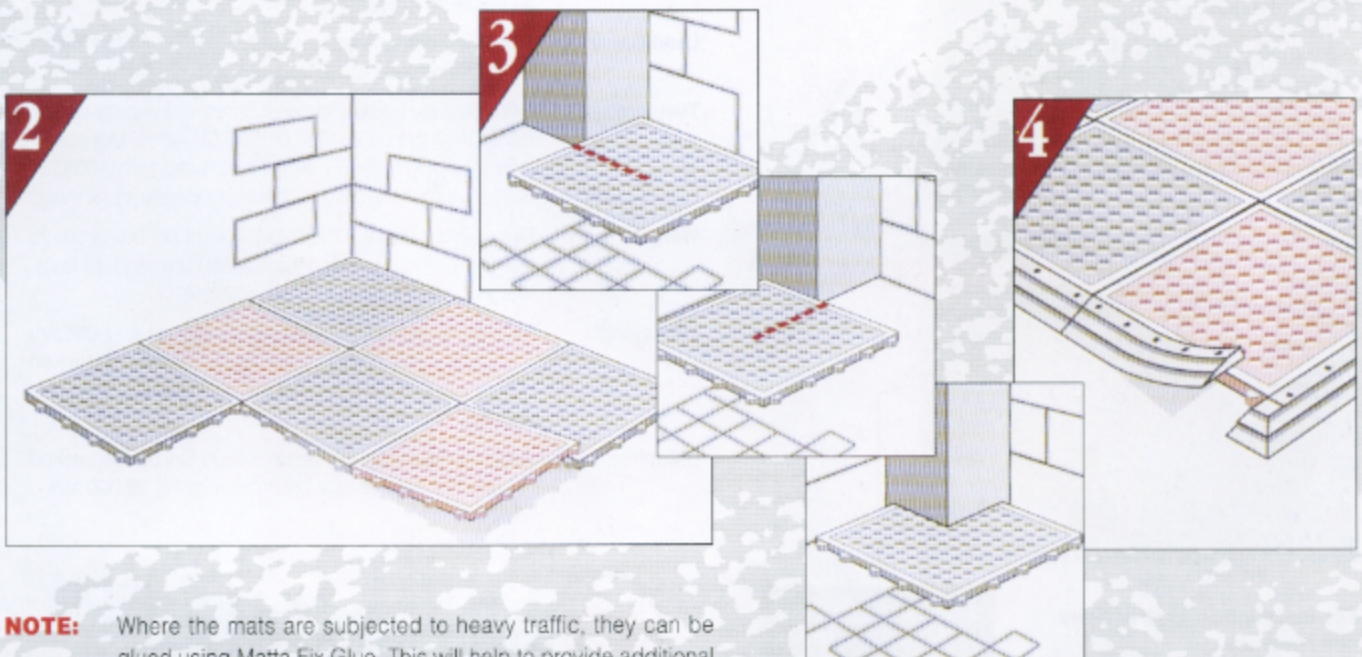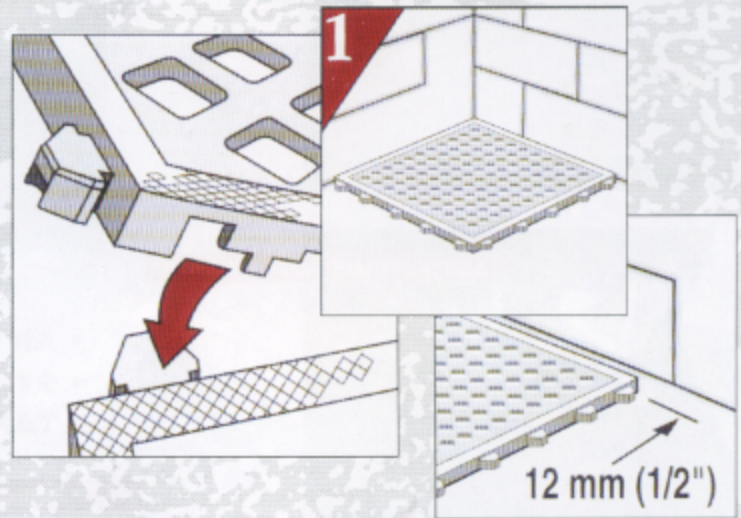

**NOTE:** Where the mats are subjected to heavy traffic, they can be glued using Matta Fix Glue. This will help to provide additional fixing security.